

UniMate USB Value Added Manual

From SecuTech Wiki

Contents

- 1 Value Added API Manual
- 2 Introduction
- 3 API contents
- 4 Samples

Value Added API Manual

Version 2.0

| Version | Date |
|---------|--------|
| 1.0 | 2015.7 |
| 2.0 | 2016.7 |

The data and information contained in this document cannot be altered without the express written permission of SecuTech Solution Inc. No part of this document can be reproduced or transmitted for any purpose whatsoever, either by electronic or mechanical means.

The general terms of trade of SecuTech Solution Inc. apply. Diverging agreements must be made in writing.

Copyright SecuTech Solution Inc. All rights reserved.

WINDOWS is a registered trademark of Microsoft Corporation.

The WINDOWS-logo is a registered trademark ^(TM) of Microsoft Corporation.

Software License

The software and the enclosed documentation are copyright-protected. By installing the software, you agree to the conditions of the licensing agreement.

Licensing Agreement

SecuTech Solution Inc. (SecuTech for short) gives the buyer the simple, exclusive and non-transferable licensing right to use the software on one individual computer or networked computer system (LAN). Copying and any other form of reproduction of the software in full or in part as well as mixing and linking it with others is prohibited. The buyer is authorized to make one single copy of the software as backup. SecuTech reserves the right to change or improve the software without notice or to replace it with a new development. SecuTech is not obliged to inform the buyer of changes, improvements or new developments or to make these available to him. A legally binding promise of certain qualities is not given. SecuTech is not responsible for damage unless it is the result of deliberate action or negligence on the part of SecuTech or its aids and assistants. SecuTech accepts no responsibility of any kind for indirect, accompanying or subsequent damage.

Contact Information

Web: <http://www.esecutech.com>

Email: sales@esecutech.com (<mailto:sales@esecutech.com>)

Please Email any comments, suggestions or questions regarding this document or our products to us at: sales@esecutech.com (<mailto:sales@esecutech.com>)

CE Attestation of Conformity

UniMate is in conformity with the protection requirements of CE Directives 89/336/EEC Amending Directive 92/31/EEC. UniMate satisfies the limits and verifying methods: EN55022/CISPR 22 Class B, EN55024: 1998.



FCC Standard



This device is in conformance with Part 15 of the FCC Rules and Regulation for Information Technology Equipment.

Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



The equipment of UniMate is USBbased.

Conformity to ISO 9001:2000



The Quality System of SecuTech Solution Inc., including its implementation, meets the requirements of the standard ISO 9001:2000

ROHS



All UniMate products are environmentally friendly with ROHS certificates.

Introduction

The Value Added API is an interface to a library of functions software developers can call upon to control the UniMate USB. This API is only used with the UniMate USB, and also allows developers to download ISO images to the CD-ROM (requires Admin PIN), and so on.





API contents

| Components | Description |
|------------|---|
| Include | C Interface of the Value Added API. |
| Libraries | Value Added API VC Libraries for Win32 and Win64. |
| Sample | Samples for the Value Added API. |
| API Manual | API Manual.pdf |

Samples

| Functions | Files | Description |
|---|---------------------------------|--|
| CALLBACKFUNC | Sample.cpp Value_Added_API.h | Callback function to show what is processing. |
| UMD_Find | Sample.cpp Value_Added_API.h | Initialize and find current devices' list. |
| UMD_AdminLogin | Sample.cpp Value_Added_API.h | Log in as administrator; default admin pin is "00000000" (8 zeros). |
| UMD_GetLanguage (Only for UniMate Flex) | Sample.cpp Value_Added_API.h | Get the display language (English, Chinese, Japanese). |
| UMD_SetLanguage (Only for UniMate Flex) | Sample.cpp Value_Added_API.h | Set the display language (English, Chinese, Japanese). |
| UMD_WriteISO | Sample.cpp Value_Added_API.h | Write an ISO image to the CD Partition (admin login needed). |

If you have any questions, please feel free to contact us at: <http://www.esecutech.com/support> or support@esecutech.com (<mailto:support@esecutech.com>)

| Follow Us! | | | |
|--|---|--|---|
|  |  |  |  |
| Twitter (https://twitter.com/eSecuTech) | Facebook (https://www.facebook.com/eSecuTech/) | YouTube (https://www.youtube.com/user/esecutech) | LinkedIn (https://ca.linkedin.com/in/secutech-solutions-inc-39110b25) |



About SecuTech

SecuTech Solution Inc. is a company specializing in data protection and strong authentication, providing total customer satisfaction in security systems & services for banks, financial institutions & other industries. Having extensive and in-depth experience within the information security market, SecuTech has drawn upon this experience to utilize today's cutting-edge technologies that are effective against increasingly sophisticated cyber attacks. Enabling enterprises, financial institutions, and government to safely adopt the economic benefits of mobile and cloud computing.

<http://www.esecutech.com>
SecuTech Solution Inc.

Contact Us:

| | North America | China | Asia-Pacific | EMEA |
|---------|---|---|---|---|
| Address | 1250 Boulevard Ren-Lvesque Ouest, #2200, Montreal, QC, H3B 4W8, Canada | Level 12, #67 Bei Si Huan Xi Lu, Beijing, China, 100080 | Suite 5.14, 32 Delhi Rd, North Ryde, NSW, 2113, Australia | 4 Cours Bayard 69002 Lyon, France |
| Phone | +1 -888-259-5825 | +8610-8288 8834 | 00612-9888 6185 | +33-042-600-2810 |
| Fax | +1 -888-259-5825 ext.0 | +8610-8288 8834 | 00612-9888 6185 | +33-042-600-2810 |
| Email | info@esecutech.com (mailto:info@esecutech.com) | cn@esecutech.com (mailto:cn@esecutech.com) | aus@esecutech.com (mailto:aus@esecutech.com) | europe@esecutech.com (mailto:europe@esecutech.com) |

Copyright 2012 SecuTech Solution Inc. All rights reserved. Reproduction in whole or in part without written permission from SecuTech is prohibited. SecuTech UniMate and the SecuTech logo are trademarks of SecuTech Inc. Windows and all other trademarks are properties of their respective owners. Features and specifications are subject to change without notice.

SecuTech

TOP

Retrieved from "https://esecutech.com/wiki/index.php?title=UniMate_USB_Value_Added_Manual&oldid=2702"

Category: UniMate Manuals

- This page was last modified on 30 June 2016, at 06:21.